

Nr.	Part nr.	Name
001	PR00000319	Draagharnas
002	PR00000251	Spuitmond DUS108/158
003	PR00000252	Moerkap DUS108 P
004	PR00000253	Nozzle DUS108 P
005	PR00000254	O-ring 12x2 DUS108 P
006	PR00000255	Spuitmond dubbell DUS108/158
007	PR00000256	Moerkap DUS108 P
008	PR00000257	Schijf DUS108 P
009	PR00000258	Spuitmond DUS108 P
010	PR00000260	Spuitlans DUS108/158
011	PR00000259	Pakking 11,5 DUS108
012	PR00000186	O-ring 6x2 DUS054 A
013	PR00000314	Haak DUS108/158
014	PR00000263	Rubberkap DUS108/158
015	PR00000264	Spuitlans adapter DUS108/158
016	PR00000147	Filterset DUS053/54D
017	PR00000146	O-ring 4,5x1,5 DUS054
018	PR00000266	Slang m/schakel DUS108/158 P
019	PR00000152	Sluitkap DUS054
020	PR00000254	O-ring 12x2 DUS108 P
021	PR00000150	Veer DUS054
022	PR00000151	Klepas DUS054
023	PR00000205	O-ring 3x1 DUS054
024	PR00000205	O-ring 3x1 DUS054
025	PR00000186	O-ring 6x2 DUS054 A
026	PR00000149	O-ring 8x1,8 DUS054
027	PR00000182	Parker ST2,9x12 DUS053/54D
028	PR00000153	Handgreepset DUS053/54D P
029	PR00000148	Handgreepschakeling DUS053/54D
030	PR00000182	Parker ST2,9x12 DUS053/54D
031	PR00000316	Tankdeksel DUS108/158 P
032	PR00000315	Tankdekselpakking DUS108/158
033	PR00000313	Tankfilter DUS108/158
034	PR00000478	Tank 10ltr DUS108
035	PR00000355	Label 10ltr DUS108
036	PR00000312	Afvoerplug DUS108/158
037	PR00000479	O-ring 21,2x2,65 DUS108 P
038	PR00000259	Pakking 11,5 DUS108
039	PR00000265	Tank elleboog DUS108/158
040	PR00000280	Slang 8x230mm DUS108/158
041	PR00000279	Zuigkop DUS108/158
042	PR00000278	Filter zuigmond DUS108/158
043	PR00000277	O-ring 17,5x3 DUS108/158
044	PR00000262	Moer 1/2 DUS108/158
045	PR00000261	Slangklem DUS108/158
046	PR00000287	Zuigset DUS108/158

Nr.	Part nr.	Name
047	PR00000281	Slang 6x140mm DUS108
048	PR00000282	Veer 5x127mm DUS108
049	PR00000261	Slangklem DUS108/158
050	PR00000283	Klep DUS108
051	PR00000261	Slangklem DUS108/158
052	PR00000284	Slang 6x55mm DUS108
053	PR00000184	Slangklem L DUS053/54D P
054	PR00000270	Pompunit DUS108/158
055	PR00000268	Antitrilring DUS108
056	PR00000292	Antitrilplaat DUS108/158
057	PR00000272	Motorplaat DUS108/158
058	PR00000271	Tapschr. 4x16mm DUS108/158
059	PR00000274	Rubberschild DUS108/158
060	PR00000273	Pompplaat DUS108/158
061	PR00000271	Tapschr. 4x16mm DUS108/158
062	PR00000267	Slangklem M DUS108/158
063	PR00000275	Slang 6x90mm DUS108
064	PR00000276	Veer DUS108
065	PR00000267	Slangklem M DUS108/158
066	PR00000155	Spuitslangklem DUS053/54D
067	PR00000184	Slangklem L DUS053/54D P
068	PR00000267	Slangklem M DUS108/158
069	PR00000341	Naamplaat DUS108
070	PR00000354	Label waarsch DUS108
071	PR00000472	Pomphuis assy DUS108/158
072	PR00000290	Pakkingstrip DUS108
073	PR00000288	Met.schr. M5x12mm DUS108/158
074	PR00000288	Met.schr. M5x12mm DUS108/158
075	PR00000271	Tapschr. 4x16mm DUS108/158
076	PR00000289	Achterplaat DUS108/158
077	PR00000288	Met.schr. M5x12mm DUS108/158
078	PR00000285	Basisplaat DUS108
079	PR00000271	Tapschr. 4x16mm DUS108/158
080	PR00000286	Schakelknop VH DUS108
081	PR00000186	O-ring 6x2 DUS054 A
082	PR00000475	Schakelknop VH riem DUS108
083	PR00000295	Printplaat DUS108/158
084	PR00000293	Parker 2,9x10 DHG180
085	PR00000271	Tapschr. 4x16mm DUS108/158
086	PR00000297	Batterijhuis DUS108/158
087	PR00000302	Aansluitunit DUS108/158
088	PR00000130	Montagebord DUS054
089	PR00000194	Veer DUS054 SET
090	PR00000132	Parker 4x12mm DUS054
091	PR00000288	Met.schr. M5x12mm DUS108/158
092	PR00000288	Met.schr. M5x12mm DUS108/158

Partdrawing for DUS108Z - Drukspuit



Nr.	Part nr.	Name
093	PR00000288	Met.schr. M5x12mm DUS108/158
094	PR00000288	Met.schr. M5x12mm DUS108/158
095	PR00000307	Indicatielabel DUS108/158
096	PR00000299	Schakelaar DUS108/158
097	PR00000298	Schakelaarpakking DUS108/158
098	PR00000300	Moer DUS108/158
099	PR00000304	Batterijkapclip DUS108/158
100	PR00000305	Batterijkap DUS108/158
101	PR00000306	As 3x136mm DUS108/158
102	PR00000303	Pakking DUS108/158